


# PARTS LIST

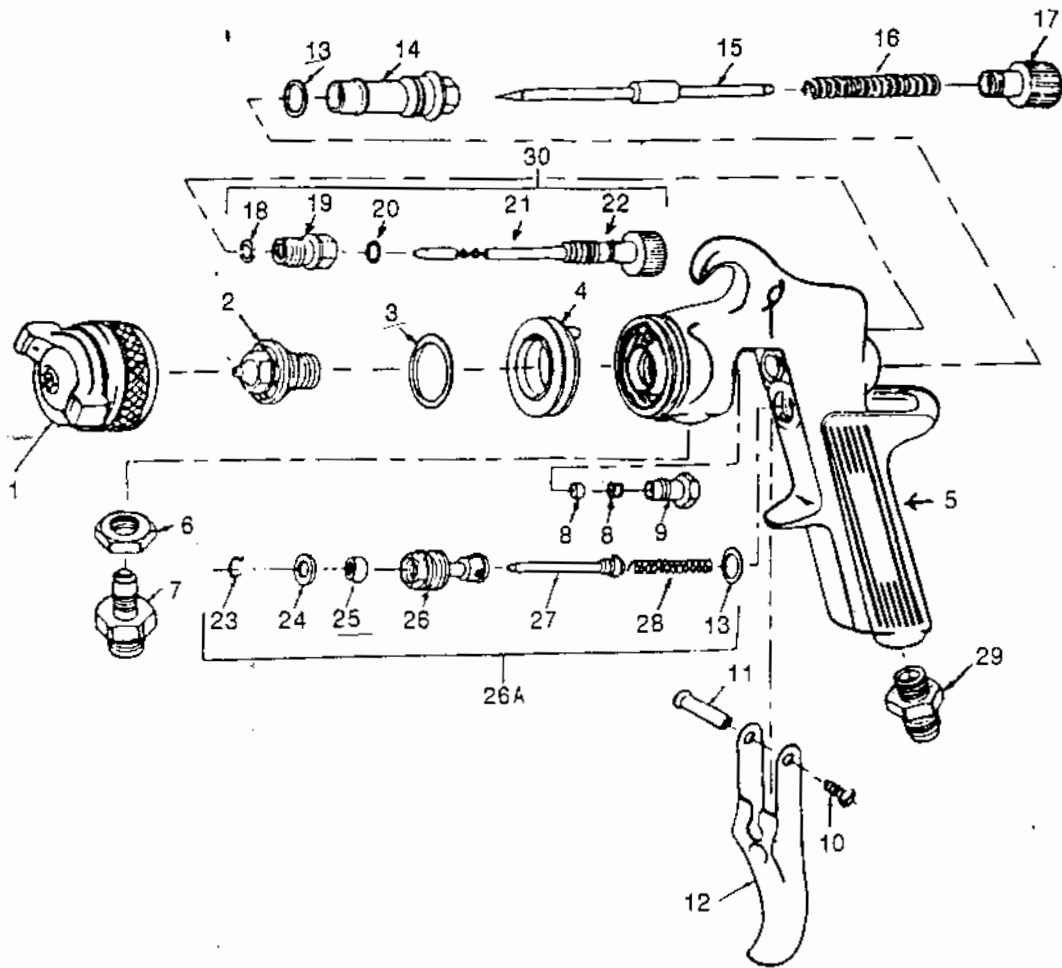

PART NO.	DESCRIPTION	PRICE (US\$)	PART NO.	DESCRIPTION	PRICE (US\$)
IM002-01	Air Cap		IM002-16	Spring	
IM002-02	Air Nozzle		IM002-17	Adjusting Screw	
IM002-03	Gasket		IM002-18	Retaining Ring	
IM002-04	Baffle		IM002-19	Housing	
IM002-05	Body		IM002-20	O-Ring	
IM002-06	Locking Nut		IM002-21	Stem	
IM002-07	Nipple		IM002-22	Key	
IM002-08	Packing		IM002-23	Snap Ring	
IM002-09	Packing Gland		IM002-24	Washer	
IM002-10	Screw		IM002-25	U Cup Seal	
IM002-11	Trigger Bearing Stud		IM002-26	Air Valve Body	
IM002-12	Trigger		IM002-27	Air Valve	
IM002-13	Gasket		IM002-28	Spring	
IM002-14	Bushing		IM002-29	Air Inlet	
IM002-15	Fluid Needle		IM002-30	Fan Adjustment Assembly	